


Installing a Blow Off Backdraft


On An Existing Table Backside

When ordering a BOB (blow off backdraft) unit you will get a new top for your machine. It will have holes like seen below. Pictured below is an end BOB unit it can mount on either end. It will be shipped with a split top, instructions for that is on the video that can be seen with the QR code below directing to the video on the web site showing how the split top is to be assembled.

BOB's Blow Off Backdraft to go along the full backside of table will arrive in two pieces. Designed to be screwed onto the wooden rails the top sets on. The center piece will set the height the BOB will set at.

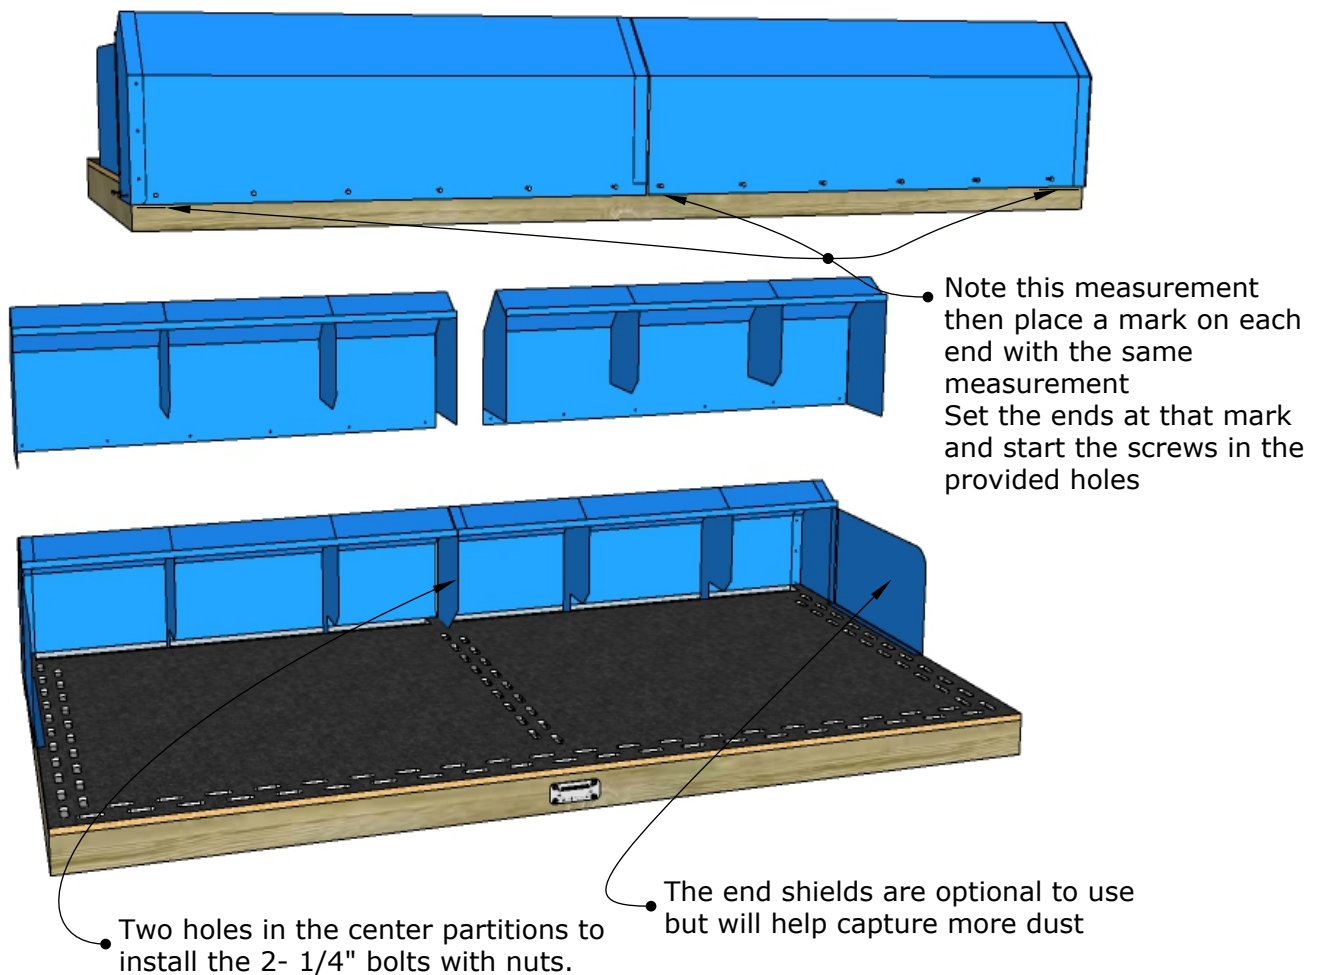

Scan to Watch
How to Assemble
a Split Top

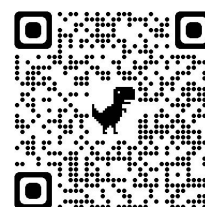

Scan to Visit Denray's
Document Library